

Ag Leader Integra



The Ag Leader Integra display puts cutting-edge precision farming technology at your fingertips. The large, full-color 12.1" HD touchscreen makes reading and using your display easy. No matter the color of your equipment, you can use it in your cab to do planter and application control, mapping, yield monitoring, real-time data logging and more. It even has four live video inputs so that you can keep an eye on your equipment while it's in operation. With a completely integrated guidance system, the Ag Leader Integra display keeps the "precision" in precision farming.

Initial Release Date: 2009

Manuals / Quick Reference Guides

Title	Description	Part Number	Revision
User Manual (10 MB)	Full manual covering all functions in the display.	4002083-ENG	Rev P
Quick Reference Guide (1 MB)	Quick guide covering display screen layout, icons, buttons, and cable layouts.	2005979-ENG	Rev H
Data Management & Decision Support			
Remote Support - AgFiniti Cloud (<1 MB)	View a display remotely using AgFiniti, setup and account sharing.	2006362-ENG	Rev B
Remote Support - Display (<1 MB)	Preauthorize a viewing session and set up permissions in the display for AgFiniti Remote Support.	2006364-ENG	Rev A
File Transfer - AgFiniti Cloud (<1 MB)	File Transfer to AgFiniti, how to share files, and transferring files from SMS desktop software.	2006360-ENG	Rev B
File Transfer - Display (<1 MB)	File Transfer to import and export files from the display, import a prescription and variety map.	2006361-ENG	Rev B
Planting			
		2006004	Rev A

<u>Seed Rate Hydraulic Drive</u> (<1 MB)	Configuration using Hydraulic Seed Rate Control, how to calculate gear ratio, and product control buttons.		
<u>Stepper Seed Control</u> (<1 MB)	Configuration for Stepper Seed Control module, how to calculate gear ratio, and product control buttons.	2006003	Rev A
<u>Clutch Control</u> (<1 MB)	Create a planting configuration using the Clutch Control Module.	2006001	Rev A
<u>Advanced Seed Monitoring</u> (<1 MB)	Seed Tube Monitoring Module setup with a planting configuration.	2006005	Rev A
<u>Planter Monitor Module</u> (<1 MB)	Configuration for Kinze planters and field operation.	2002831-43	Rev A
<u>Hydraulic Down Force</u> (<1 MB)	Planting configuration using hydraulic down force via CAN, calibration, cabling, FAQ, and common troubleshooting.	2006350	Rev B
Application			
<u>ISO Liquid Quick Reference</u> (<1 MB)	ISOBUS Liquid Control Module setup and operation through Universal Terminal.	2006010	Rev A
<u>ISO Liquid User Manual</u> (6 MB)		2006251	Rev A
<u>Sprayer</u> (<1 MB)	DirectCommand liquid controller settings and product control buttons.	ï»¿2006310ï»¿	Rev B
<u>Direct Injection</u> (1 MB)	DirectCommand injection pump settings, product control buttons, and injection control buttons.	ï»¿2006311ï»¿	Rev A
<u>Spreader</u> (<1 MB)	DirectCommand dry controller settings, product control buttons, and calibration.	ï»¿2006314ï»¿	Rev C
<u>OptRx</u> (<1 MB)	Crop sensor setup, rate table settings, and creating the V.I. virtual reference strip.	ï»¿2006312ï»¿	Rev C
<u>NORAC UC5 Quick Reference</u> (<1 MB)	Boom height control setup, sensors and valve drivers, and basic field operation.	2006313	Rev C
<u>NORAC UC5 Manual</u> (5MB)		UC5-BC-Manual-AL	Rev F
<u>Strip-Till / Air Cart</u> (<1 MB)	Strip-till and air cart configuration, valve and actuator settings, product control buttons, and field operation.	ï»¿2006315ï»¿	Rev B
<u>ISOBUS / Virtual Terminal</u> (2 MB)	Virtual Terminal quick reference guide: display setup, cabling, common troubleshooting.	2006300	Rev C
<u>ISO Serial Bridge Module</u> (2 MB)	Enable VT and task controller and display configuration.	2006007	Rev A
<u>Serial Communication</u> (<1 MB)	Serial controller setup with Application Rate Module, list of compatible controllers.	2002831-50	Rev B

MB)

Harvest

Harvest Calibrations (<1 MB)	How to perform harvest calibrations including: distance, header sensor, vibration, temperature, moisture, and grain weight.	2002831-51	Rev A
----------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------	------------	-------

Water Management

Intellislope (1 MB)	Take plow measurements and enter into display, GPS configuration, surveying, and installation modes.	2006014	Rev A
-------------------------------------	------------------------------------------------------------------------------------------------------	---------	-------

Ag Cam Video

Auxilliary Cable Quick Reference (<1 MB)	Installation instructions and cabling diagram.	2005968	Rev B
----------------------------------------------------------	------------------------------------------------	---------	-------

Looking for translated documents?

Some manuals and quick start guides have been localized for other countries. Please see [Languages and Localization](#) for available translations.

Last Reviewed

Date: 10/8/15 Reviewer: JMD

Content last reviewed on: 8/1/17

Reviewed by: JW

Article ID: 1543

Last updated: 19 Sep, 2017

Revision: 11

Manuals / Guides / Schematics -> Displays -> Ag Leader Integra

<https://support.agleader.com/kbp/index.php?View=entry&EntryID=1543>