

# ***Ag Leader***® ***Technology***



## **Kinze® 3000 Series Row Unit**

---

**Implement Switch  
Installation Instructions  
PN: 2006424-ENG REV. B**

# Installation Overview

## Required Parts

Part Number	Qty *	Description
4005096	1	IMPLEMENT SWITCH BRACKET
4005070	1	IMPLEMENT SWITCH
2002401-50150	2	HEX HEAD CAP SCREW - 1/2" x 1 1/2"
2002225-50	2	HEX SERRATED FLANGE NUT - 1/2"
2002487-62	1	IMPLEMENT SWITCH SPACER
2000453-4	1	HEADER EXTENSION CABLE - 42"

\* Quantities listed are per row unit

## Installation Procedure

1. Install implement switch to bracket by inserting threaded base into hole of bracket. Fully tighten rubber end to threaded base, and then fasten nut securely against bracket.




2. Align two holes of bracket with two holes of lower parallel arm.



3. Insert 1/2 in. bolt into first (front) mounting hole and finger tighten flange nut.



4. Insert 1/2 in. bolt into second (rear) mounting hole and finger tighten flange nut. When row unit is down, implement switch should be partly compressed by parallel arm stop.

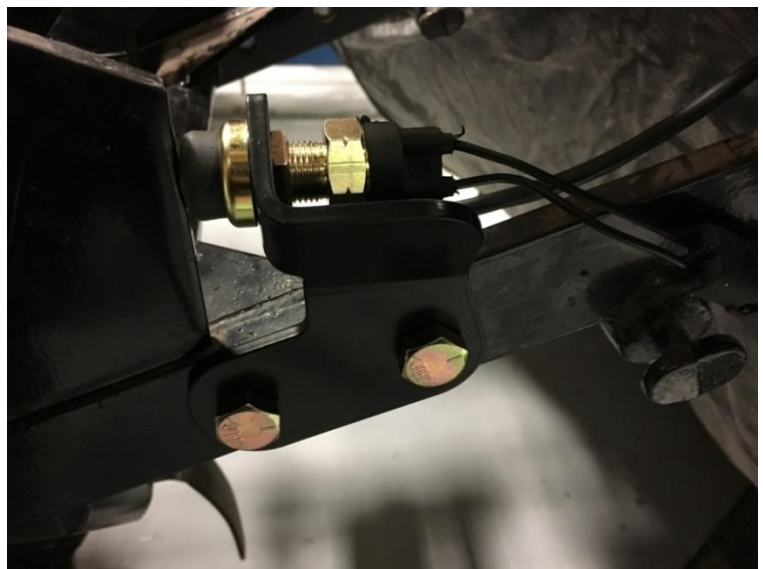

5. Completely tighten both 1/2 in. bolts and flange nuts.



6. If necessary for proper switch positioning, add spacer to implement switch between rubber end and bracket then tighten nut on backside of bracket.
7. Route implement switch cable toward toolbar. It will be connected to the implement switch module later. Use header extension cable if necessary.

